

DISPLAY **A**

Watch hands

Minute hand
60 seconds timer
30 minutes timer
1/10 second timer
Pushbutton A
Pushbutton B
Date indicator
Hour hand
Second hand
Setting crown (position I, II, III)

SETTING THE TIMERS TO ZERO **B**

Setting crown in position II or III

Set the hand of the 1/10 second timer to zero
Set the hand of the 30 minutes timer to zero
Setting crown
Set the hand of the 60 seconds timer to zero

CORRECTION MODE **C**

Setting the time
Correction of date

Correction of hour and minute hand and date at every passing to midnight
Rapid correction of date

Note
Setting crown in position III : STOP-SECOND

TIMING MODE **D**

Simple timing function

START 1
STOP 2
Read time
- 5 minutes
- 57 seconds
- 7/10 sec
Reset to zero 3
Setting crown in position I

1 to 3 order of functions

WARNING
Before starting the time, put back the chronograph hands to their original position.
If necessary, see paragraph SETTING THE TIMERS TO ZERO.

TIMING MODE **E**

ADD function

1 START
2 STOP Read
3 RESTART
4 STOP Read
5 RESTART
6 STOP Read
7 STOP Read

Setting crown in position I
Reset to zero X

1 to X order of functions

TIMING MODE **F**

SPLIT-TIME or INTERMEDIATE TIMES function

START 1
Setting crown in position I
SPLIT 1 2
Read time 1
- 5 minutes
- 4 seconds
- 6/10 sec
RESTART (catching-up) 3

1 to 3 order of functions

TIMING MODE **G**

SPLIT-TIME or INTERMEDIATE TIMES function (cont. and end)

SPLIT 2 4
Read time 2
- 15 minutes
- 36 seconds
- 8/10 sec
RESTART (catching-up) 5
STOP Read LAST TIME 6
- 25 minutes
- 18 seconds
- 4/10 sec
Reset to zero 7

4 to 7 order of functions